



APPLICATION GUIDELINES

Zwaluw FireProtect FP Silicone Sealant

FP Silicone Sealant can easily be applied with a professional caulking gun.

Situation A: Single or double sided sealing of the joint with FP Silicone Sealant



1. Clean from dust with a soft brush and remove loose particles. When needed pre-treat the joints with a primer for porous substrates.



Place backer rod at the right depth.
Joint width/3 + 6 mm = joint depth
Example: 15mm/3 = 5+6mm = 11mm depth



3. Apply FP Silicone Sealant to the backer rod and make sure the joint is completely filled with material.







4. Finish the joint with a spatula or fingers moistened with Zwaluw Mixed Finisher.



- 5. Repeat steps 1 to 4 on the other side when the joint needs to be sealed on both sides.
- 6. The joint is now fire retardant and securely sealed with FP Silicone Sealant.






Zwaluw FireProtect FP Silicone Sealant

FP Silicone Sealant can easily be applied with a professional caulking gun.

Situation B: Fill joint partly with FP PU Foam and finish with FP Silicone Sealant

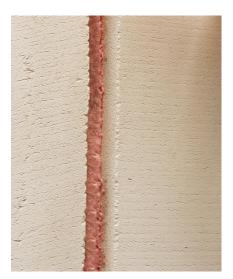

1. See application guidelines for FP PU Foam to apply the foam recessed, with result as beside picture.



2. Apply FP Silicone Sealant to the cured FP PU Foam and make sure the joint is completely filled with material.







3. Finish the joint with a spatula or fingers moistened with Zwaluw Mixed Finisher.



4. The joint is now fire retardant and securely sealed with FP PU Foam and FP Silicone Sealant.